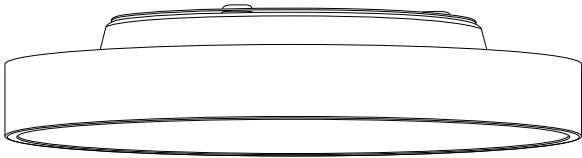
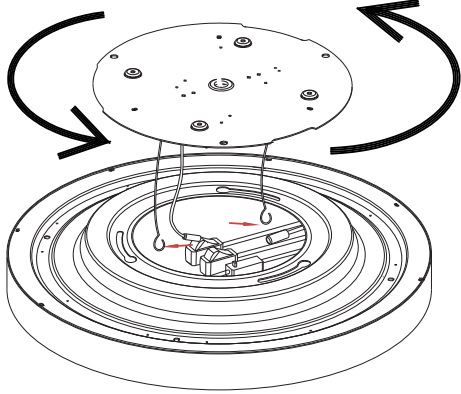
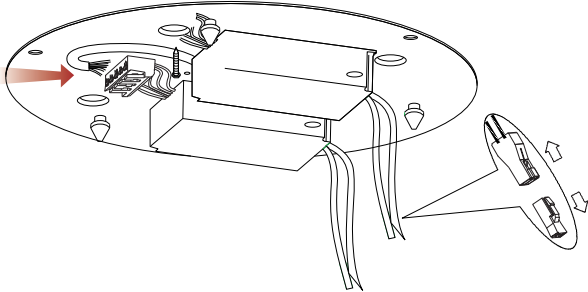
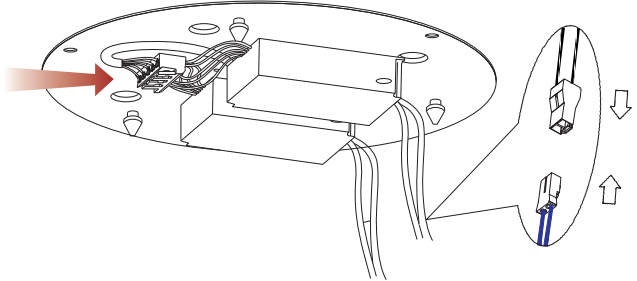
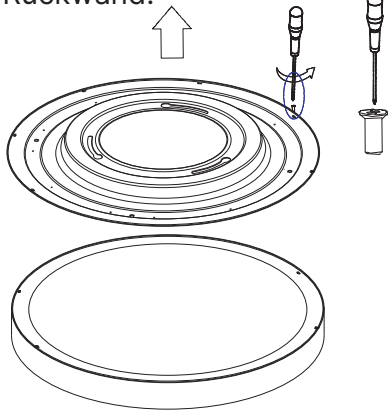
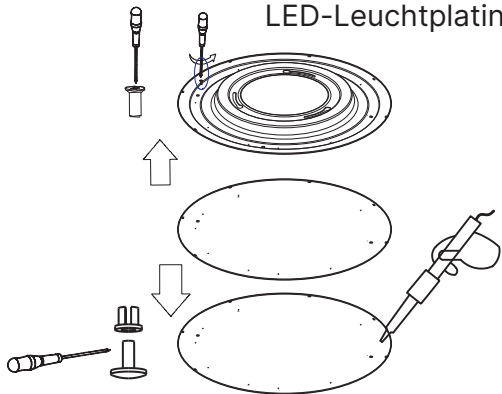
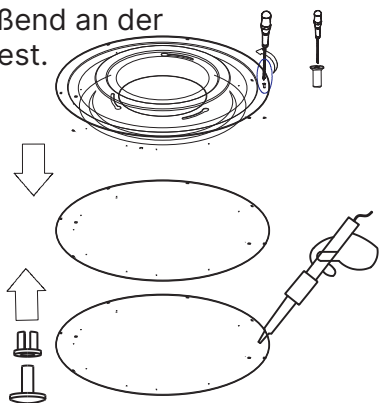
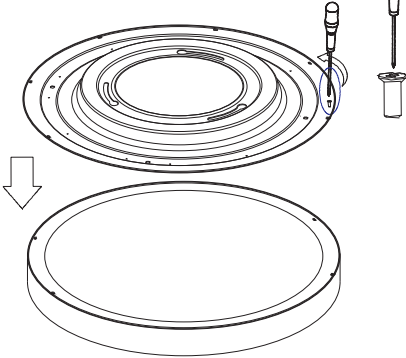
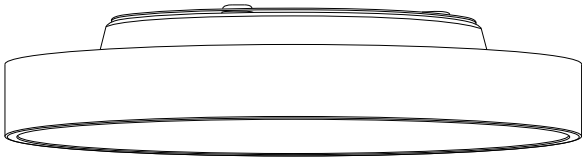
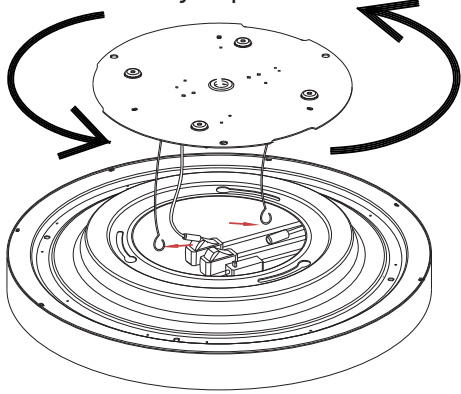
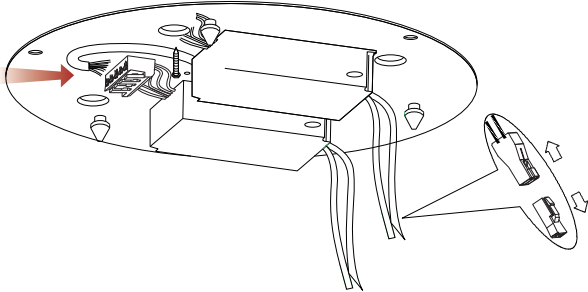
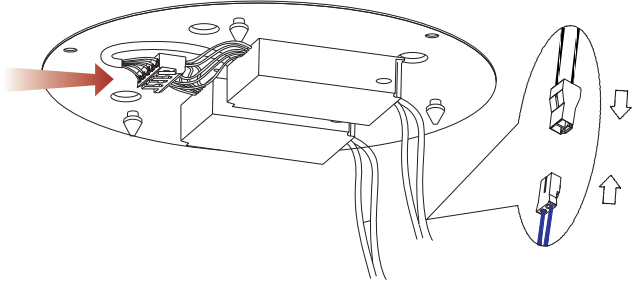
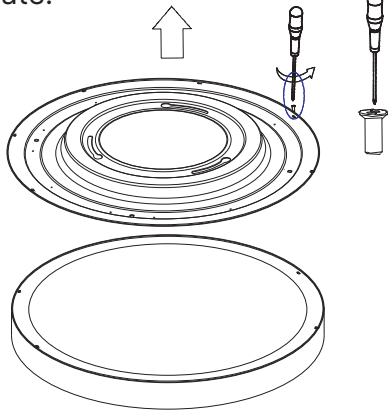
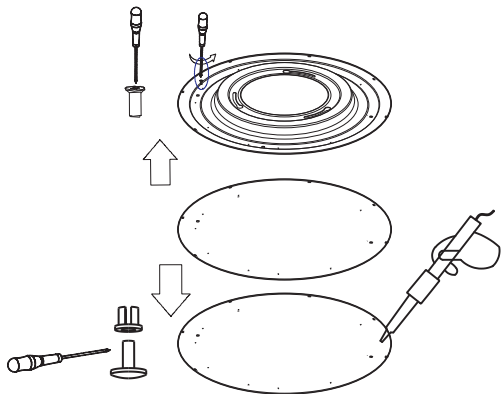
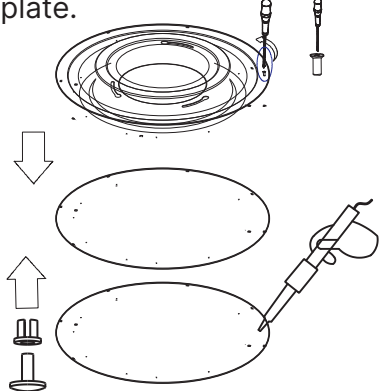


## Tausch der fest verbauten LED Lichtquelle

<p>① LED LICHT</p> 	<p>② Entfernen Sie die Aufhängungsplatte und lösen Sie das Sicherheitsseil.</p> 
<p>③ Entfernen Sie die LED-Stecker und Buchsen und ziehen Sie das Netzkabel ab.</p> 	<p>④ Installieren Sie den Treiber auf der Hängeleiste, verbinden Sie den Stecker und die Buchse und schließen</p> 
<p>⑥ Lösen Sie die Schrauben und entfernen Sie die Rückwand.</p> 	<p>⑦ Lösen Sie die Schrauben, entfernen Sie die LED-Leuchtplatine und entfernen Sie die Kunststoffschnalle auf der LED-Leuchtplatine.</p> 
<p>⑧ Befestigen Sie die LED-Leuchttafel mit Kunststoffschnallen und schrauben Sie sie anschließend an der Rückwand fest.</p> 	<p>⑨ Die Rückwand und den Aluminiumring mit Schrauben befestigen und arretieren.</p> 

## Replacement of built in LED light source

<p>① LED LIGHT</p> 	<p>② Remove the hanging plate and loosen the safety rope.</p> 
<p>③ Remove the LED male and female plugs, and remove the mains power cord.</p> 	<p>④ Install the driver on the hanging board, connect the male and female plugs, and connect to the mains wire.</p> 
<p>⑥ Unscrew the screws and remove the back plate.</p> 	<p>⑦ Unscrew the screws, remove the LED light board, remove the plastic buckle on the LED light board.</p> 
<p>⑧ Use plastic buckles to lock the LED light board, and then use screws to tighten it to the back plate.</p> 	<p>⑨ Fixed and locked the back plate and the aluminum ring with screws.</p> 