


Tausch der fest verbauten LED Lichtquelle/Replacement of built in LED light source

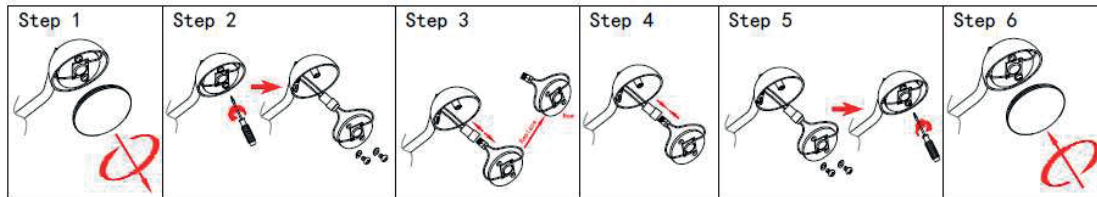

Step 1: Turn away the cover from the lamp - by hand

Step 2: Loosen the LED profile using a screwdriver.

Step 3: Pull the LED profile out of the connector to replace it - by hand.

Step 4: Connect the new LED profile to the connector - by hand.

Step 5: Screw it firmly into the lamp - using a screwdriver.

Step 6: Put on the cover - by hand

Schritt 1: Drehen Sie die Abdeckung weg.

Schritt 2: Lösen Sie das LED-Profil mit einem Schraubenzieher.


Schritt 3: Ziehen Sie das LED-Profil von Hand aus dem Verbinder, um es zu ersetzen.

Schritt 4: Verbinden Sie das neue LED-Profil mit dem Verbinder - von Hand.

Schritt 5: Schrauben Sie es mit einem Schraubenzieher fest in die Lampe.

Schritt 6: Abdeckung aufsetzen - von Hand.

Tausch des LED-Treiber/Replacement of the LED driver

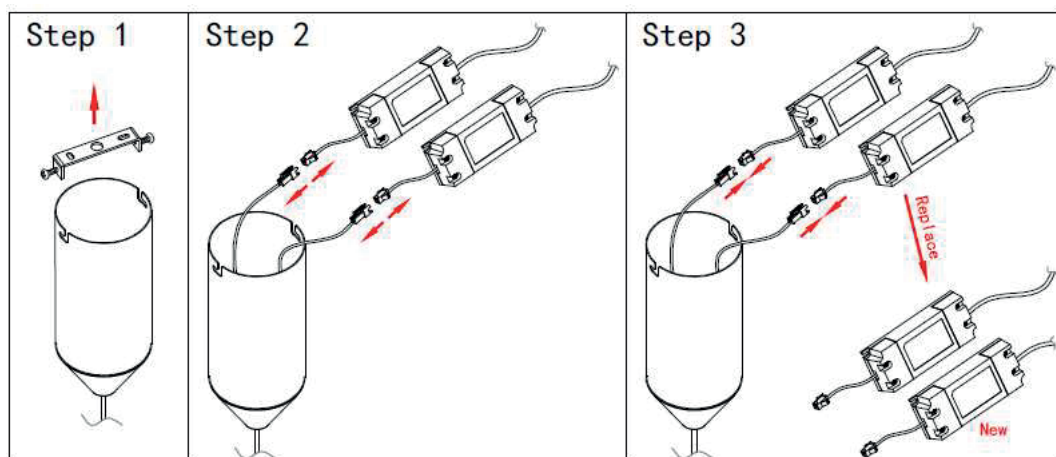

Step 1: Take away the hanger - by screwdriver.

Step 2: Release the snap-joint of the driver to replace - by hand.

Step 3: Plug in new drivers and put back in the canopy.

Schritt 1: Den Halter mit einem Schraubenzieher entfernen.

Schritt 2: Die Schnappverbindung des Treibers per Hand lösen, um den alten Treiber zu entfernen.

Schritt 3: Den neuen Treiber einstecken und wieder in das Baldachin-Gehäuse einsetzen.